




PLAN VIEW

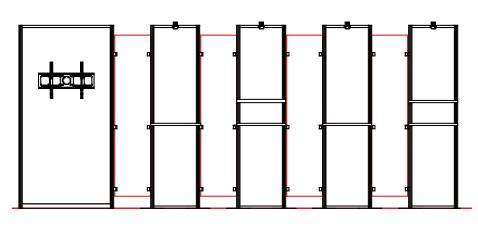

FRONT ELEVATION

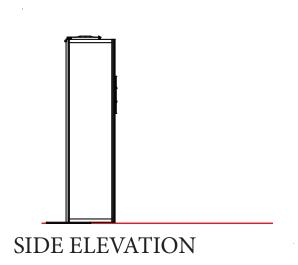



RIGHT ISO

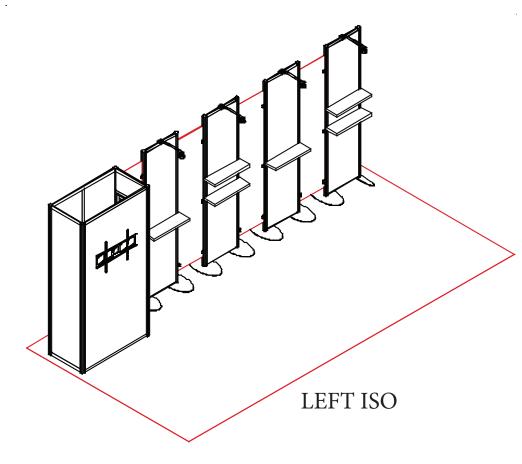


SHEET # 2

- 1. Take assembled close side and door
- 2. Attach Closet Back parts and in-fills to side and door
- 3. Attach Closet Front parts to side and door
- 4. Attach Front Graphic
- 5. Attach Monitor Mount Thru Graphic

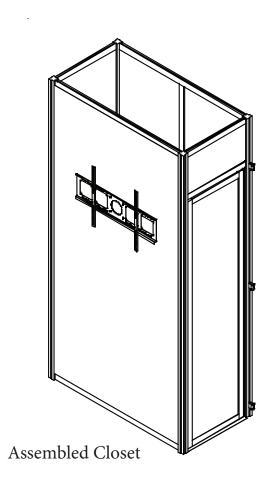

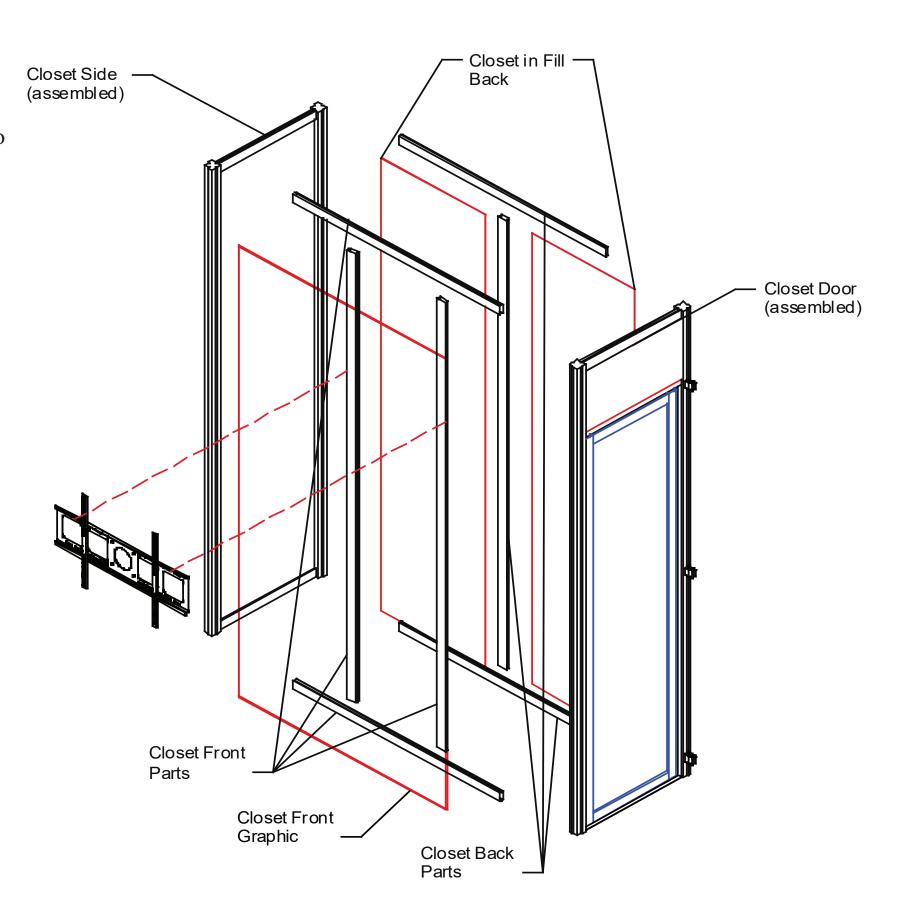

- 6. Attach Base plates to K1, K2, K3, K4 (BPB-goes on right of K4)
- 7. Attach G1 to clamp brackets between Assembled Closet & K1 (Set 6" from Floor)
- 8. Attach G2 between K1 & K2 (Set 6" from Floor)
- 9. Attach G3 between K2 & K3 (Set 6" from Floor)
- 10. Attach G4 between K3 & K4 (Set 6" from Floor)
- 11. Attach Shelf Supports to K1, K2, K3, K4 as shown (location are marked on uprights)
- 12. Place shelves on shelf supports
- 13. Clamp lights to K1, K2, K3, K4 (Cords drop behind display and plug into power strip)

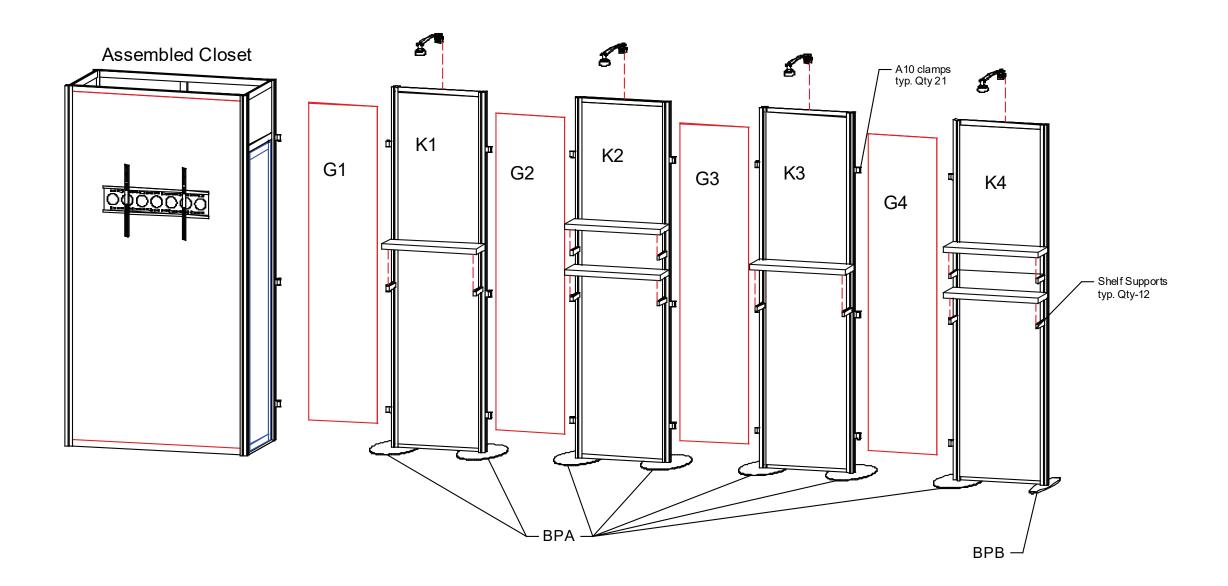



General Setup Instructions


- Read entire setup instruction manual prior to unpacking parts and pieces.
- The setup instructions are created specifically for this configuration.
- Setup instructions are laid out sequentially in steps, including exploded views with detailed explanation for assembly.

Cleaning & Packing


- For Cleaning Metal, Plex, & Laminate Parts: Use a MILD NON-ABRASIVE cleanser and soft cloth/paper towel to clean all surfaces.
- Keep exhibit components away from heat and prolonged sun exposure. Heat and UV exposure will warp and fade components.
- Retain all provided Packing Materials. All provided packing materials are for ease of repacking & component protection.

Disassembly


- For loss prevention, tighten all set screws and locks during disassembly.

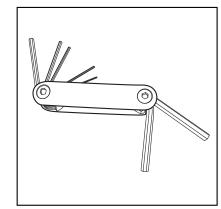


Hex Tool - Essential for Assembly

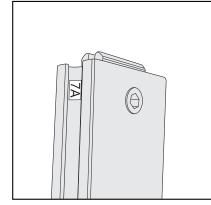


Part Identification - Numbering

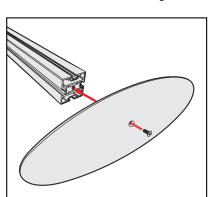

Spline Connection

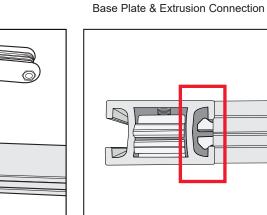

Extrusion & Lock Connection

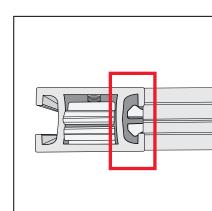

Engaged Lock





DO NOT USE POWER TOOLS



LADDERS OR LIFTS MAY BE REQUIRED



ALL CONNECTIONS MUST BE TIGHTLY SECURED

